




INST1171

PHASE CLAMP BRACKET INSTRUCTIONS


STEP 1

Slide clamp bracket onto surface

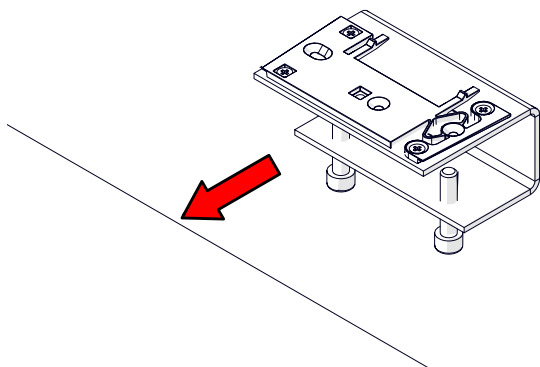



STEP 2

Tighten the clamp bracket bolts

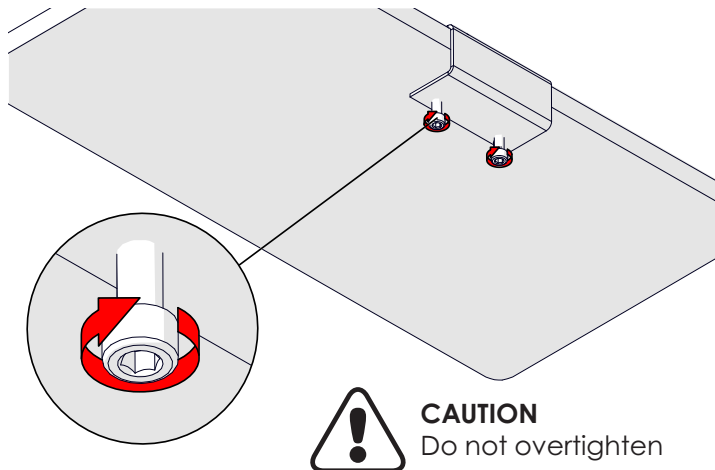



STEP 3

Slide PHASE onto bracket

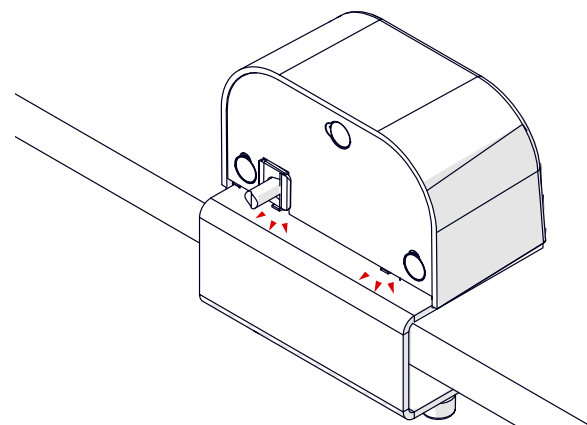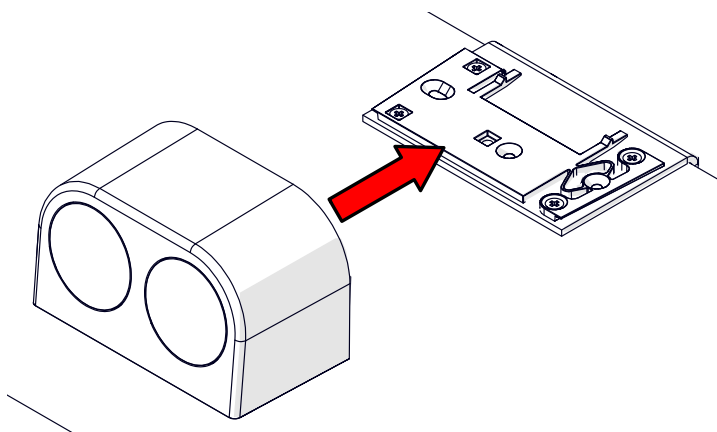

STEP 4

Complete

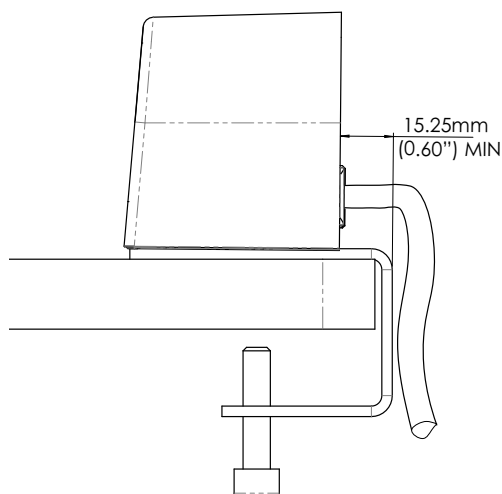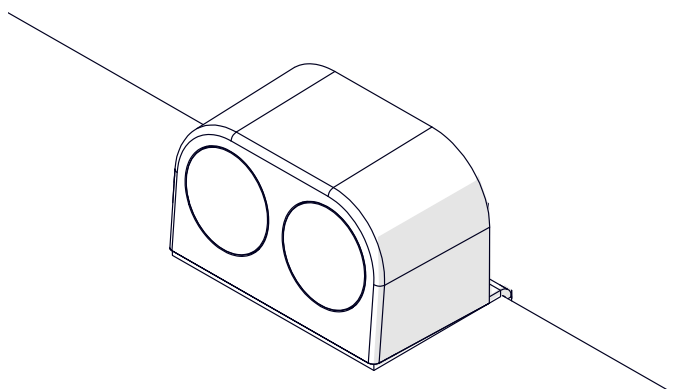



INST1171

PHASE CLAMP BRACKET INSTRUCTIONS

RELEASE CLAMP

Press down on locking tabs to release PHASE and slide off

