


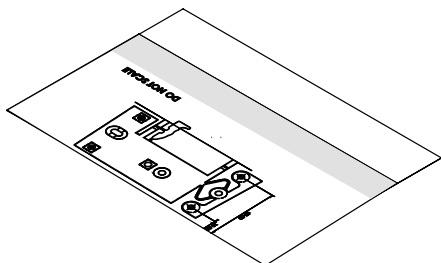


STEP 1 SLIDE ON

Fold instruction sheet for 'SLIDE ON' fitting




STEP 2

Align folded instruction sheet with surface

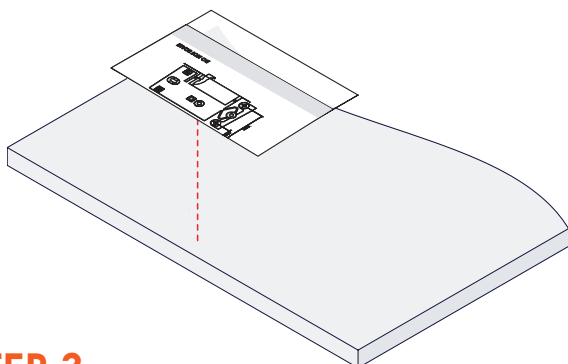

STEP 3


Drill pilot holes through instructions where indicated, approx 5mm deep in **3** places. Typical pilot drill size 1.5-2mm depending on screws being used.

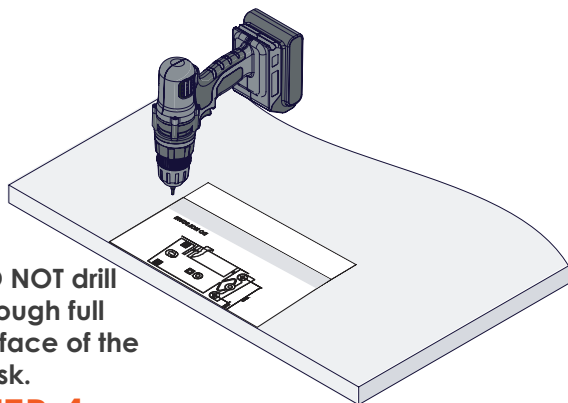

DO NOT drill through full surface of the desk.


STEP 4

Follow INST1190 to complete installation

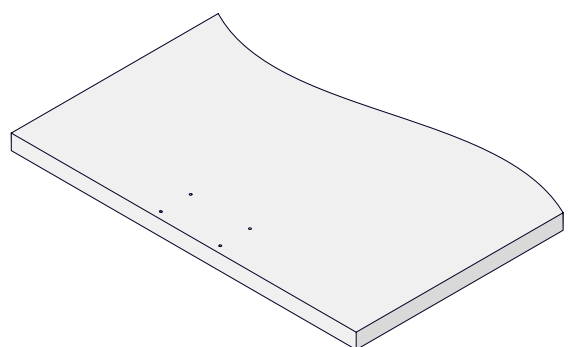


STEP 1 CLIP ON

Fold instruction sheet for 'CLIP ON' fitting

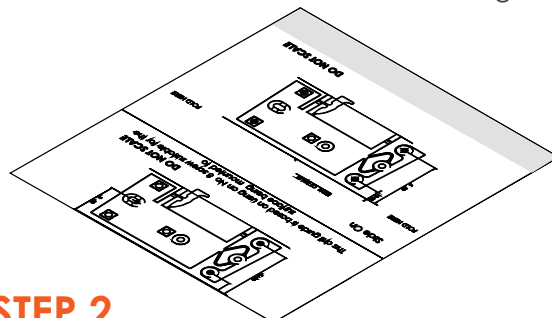


STEP 2

Align folded instruction sheet with surface

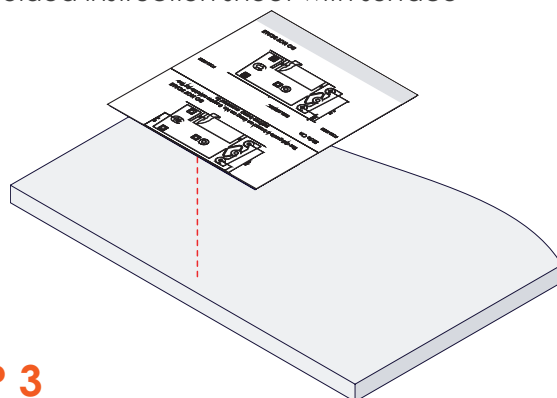


STEP 3

Drill pilot holes through instructions where indicated, approx 5mm deep in **4** places. Typical pilot drill size 1.5-2mm depending on screws being used.

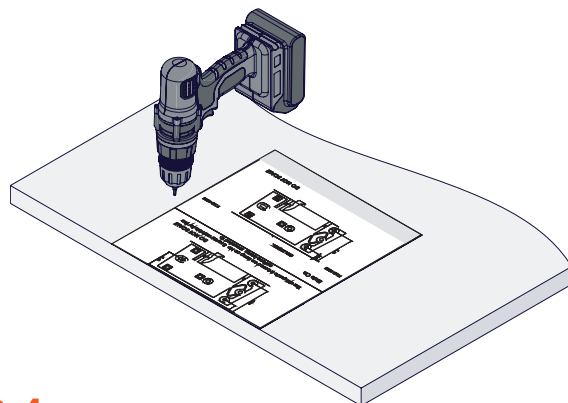


STEP 4

Follow INST1189 to complete installation

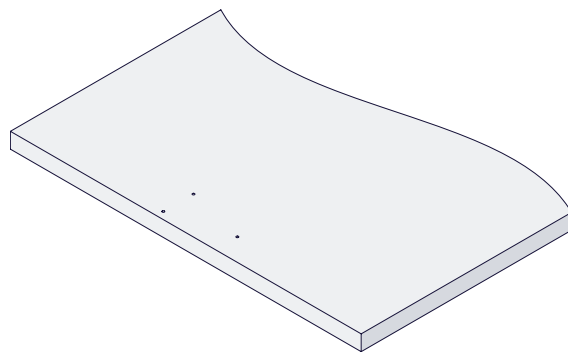




CLIP ON

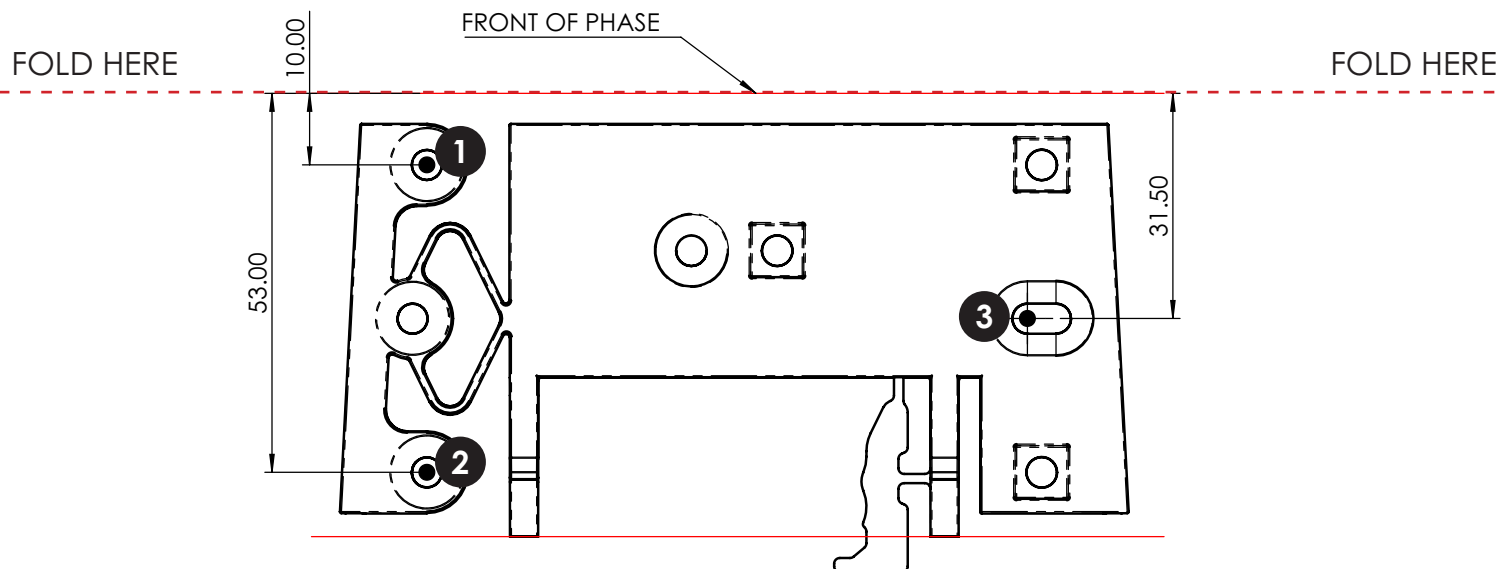

DO NOT SCALE

This drill guide is based on using an No. 8 screw suitable for the surface being mounted to

SLIDE ON

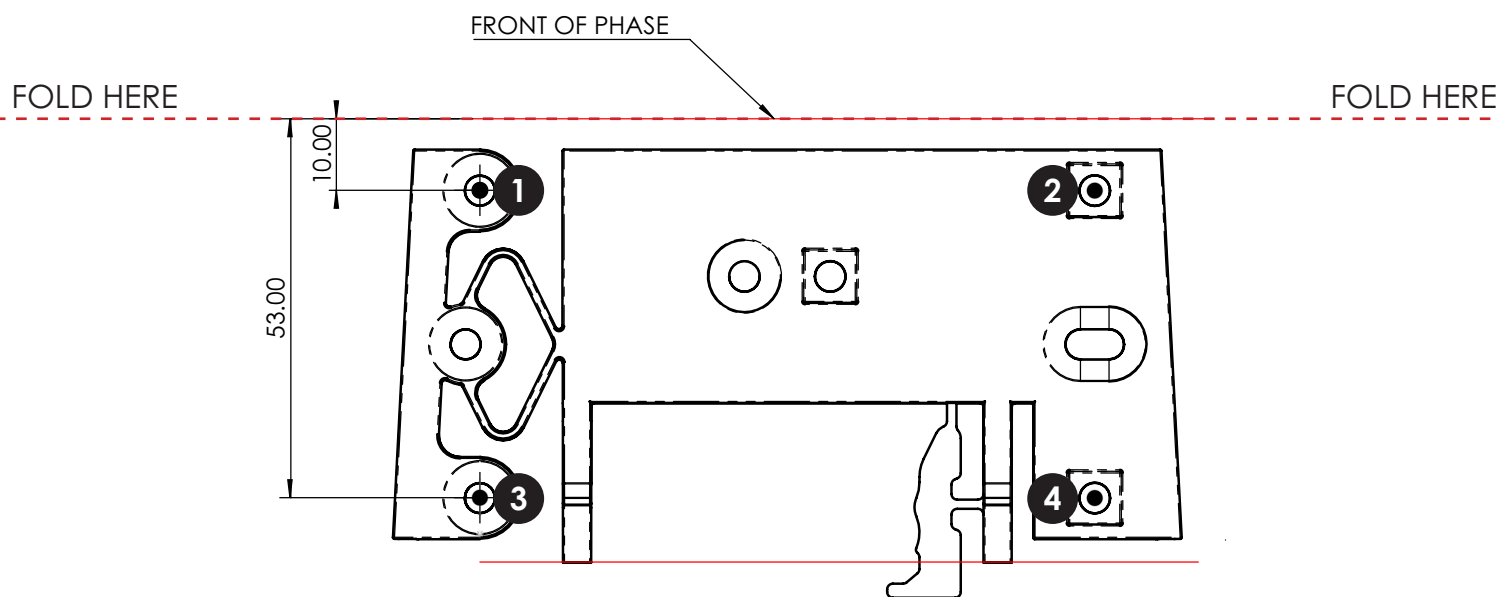

DO NOT SCALE