





STEP 1

Separate and retain locking clip

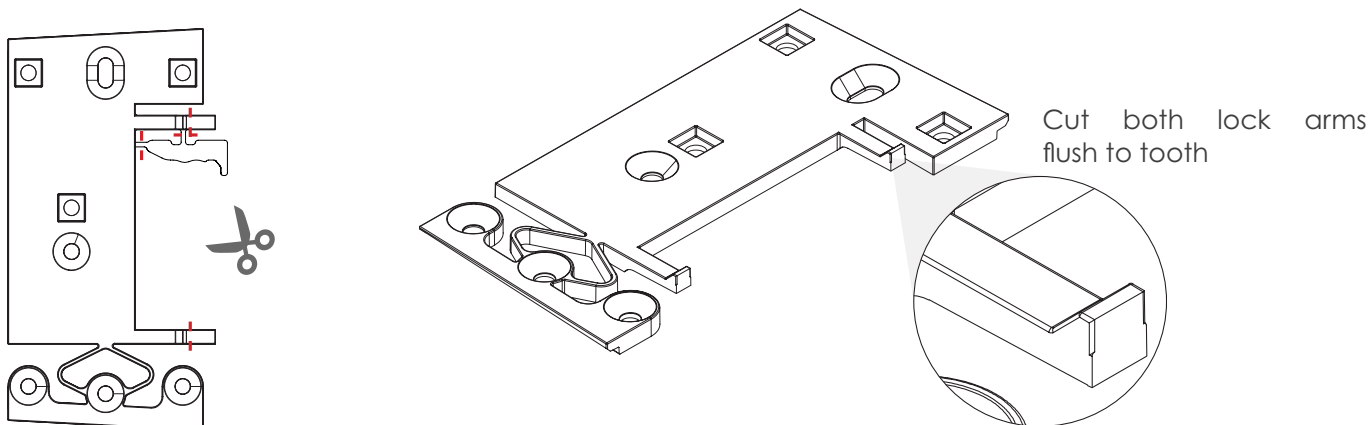



STEP 2

Dimensions & drill positions (see INST1359 PHASE Drill Guide for more details)

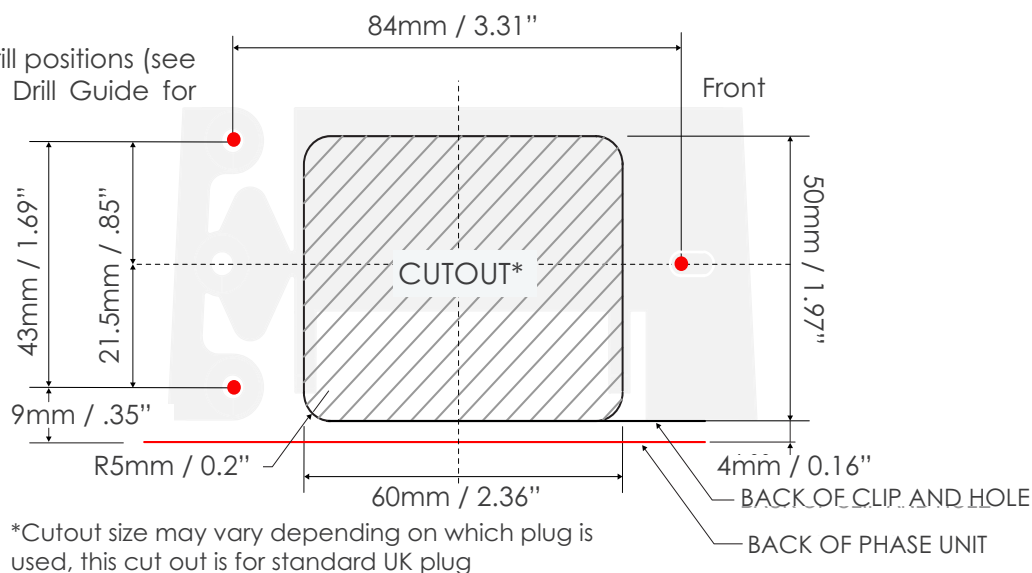

STEP 3


Feed cable through cutout

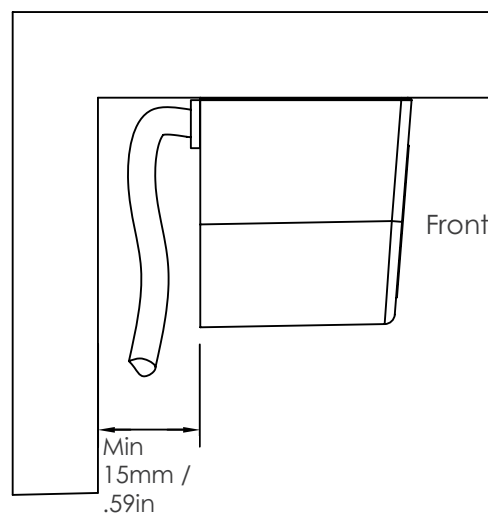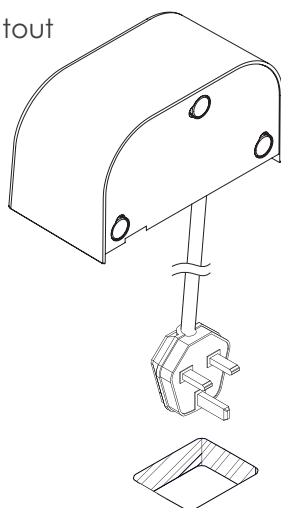




STEP 4

Position mounting clip and screw down

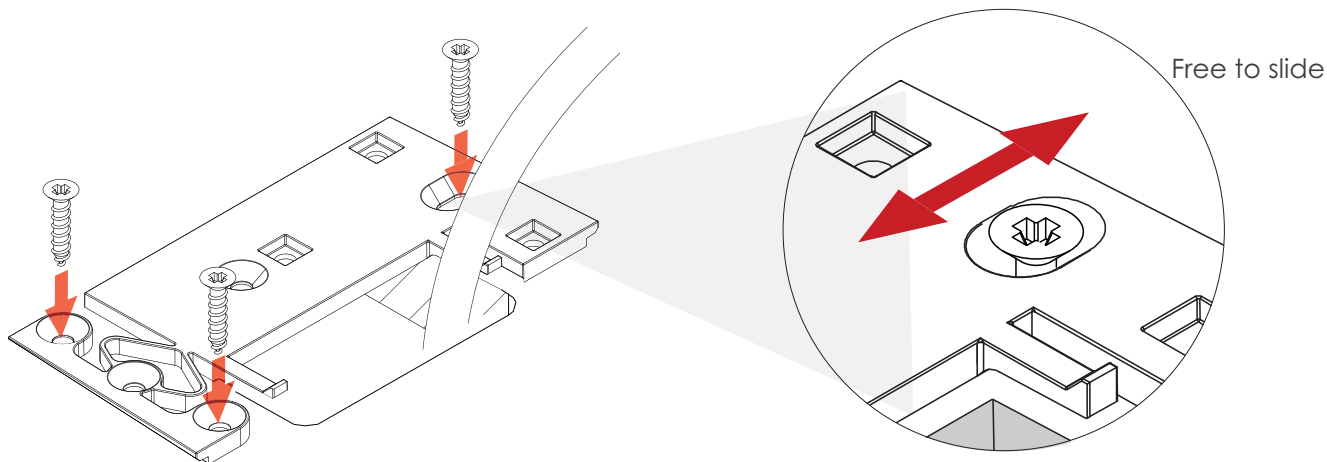


STEP 5

Align PHASE with mounting bracket and click into place

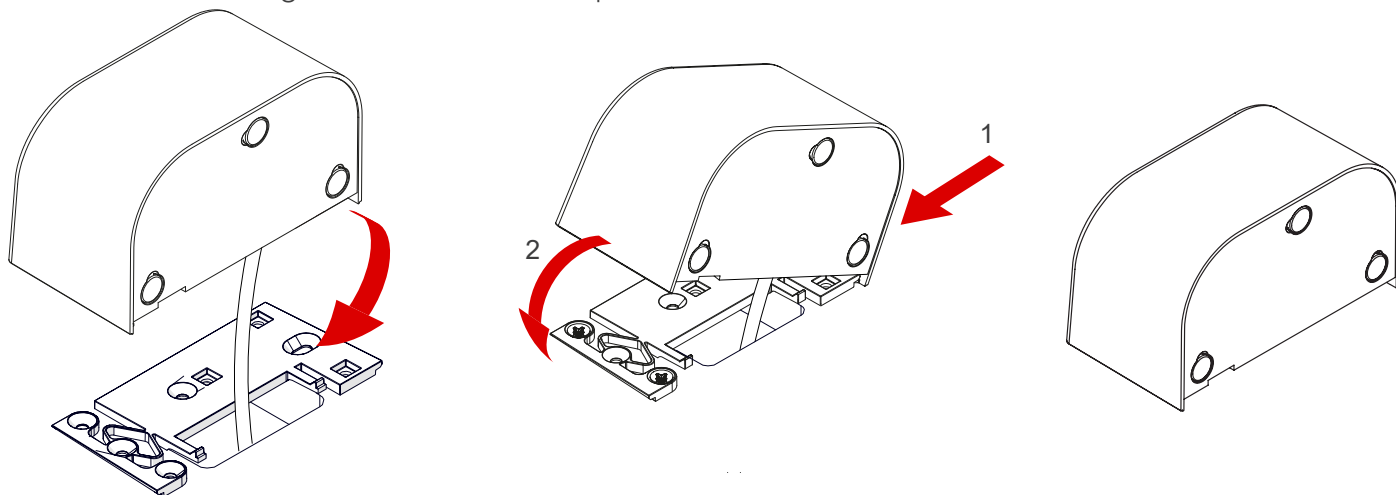

STEP 6

Insert locking clip

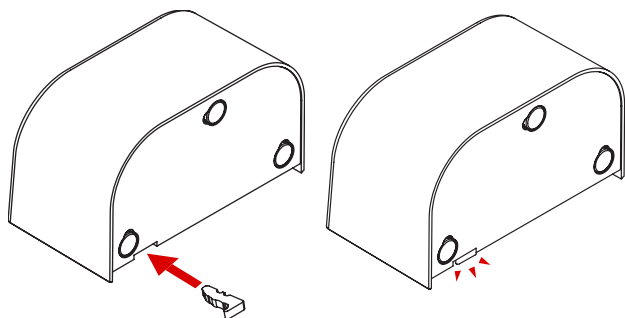

PHASE Release

Lever out locking clip using flat head screwdriver

