




INST1190

PHASE SLIDE ON INSTRUCTIONS


STEP 1

Dimensions & drill positions
(see INST1359 PHASE Drill
Guide for more details)

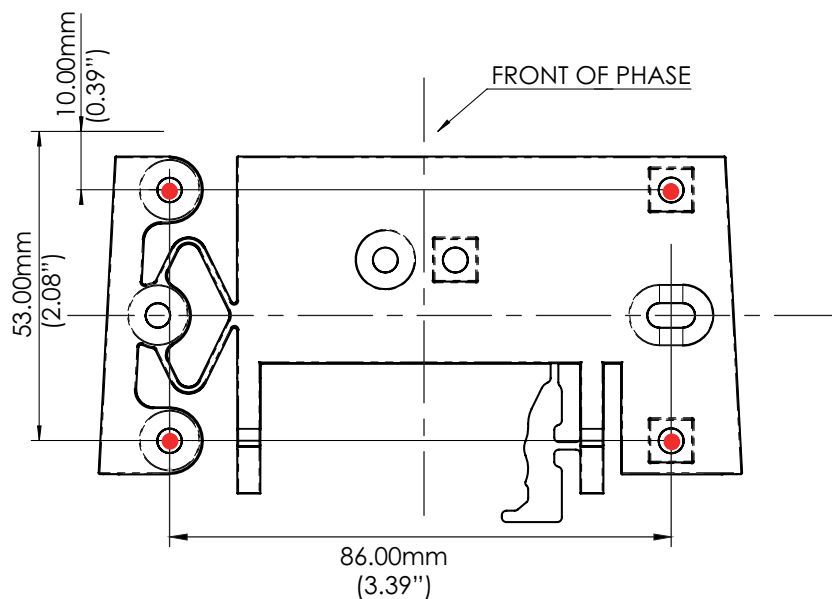


STEP 2

Screw clip to desk - set back, as required, from
the desk edge

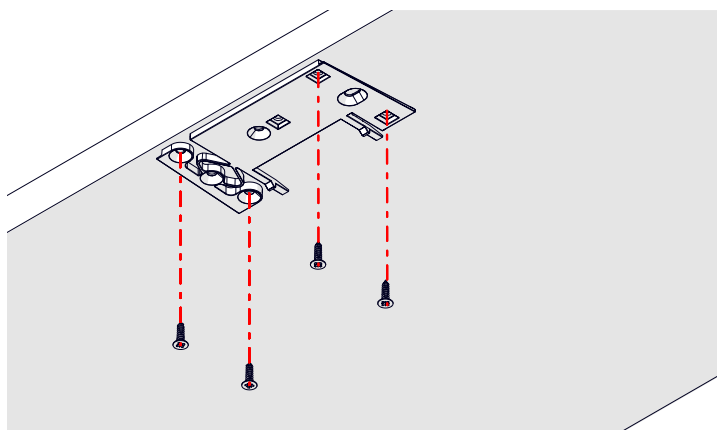

STEP 3

Align PHASE with clamp bracket and slide
into a place until click is heard

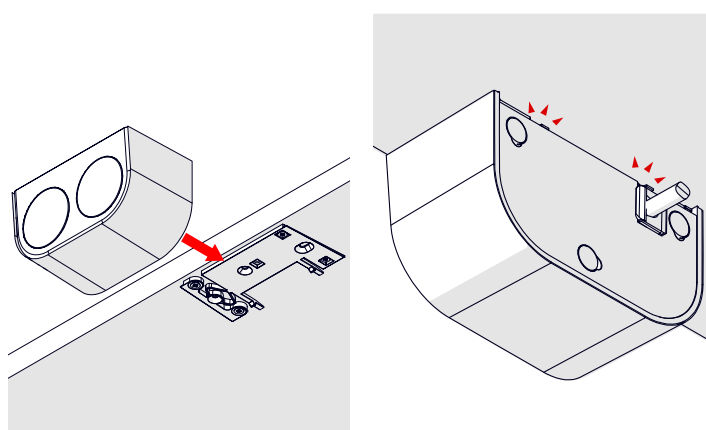

STEP 4

Complete

